

Workshop 14

Key Fob Re-Coding

Ensure all the doors have been unlocked, either by using a good transponder key or remote control Plip key.

Procedure

1. Turn the ignition switch from Position 0 to ON 6 times within 10 seconds.
2. Then turn ignition switch to OFF position. Leave key in ignition switch.
3. After 2 seconds, the system will enter programming mode and will flash the warning lights twice.
4. Press and HOLD the unlock button on the Plip.
5. While pressing the unlock button, press the lock button 3 times.
6. Release the unlock button.
7. The warning lights will flash once to indicate successful programming.
8. Repeat procedure 4 to 7 for up to 4 Plip keys.
9. When completed turn ignition ON, and the warning lights will flash 2 times.
10. Remove key, and check all Plip keys for operation.

NOTE:

[The programming mode will stop](#)

When the ignition is switched on or, Key fobs have been programmed or no input signal either from the switch or plip keys has been received for 120 seconds.

This has to be done with [all](#) remotes, hope it works

P.S. My two remotes have the same operating frequency as each other that is 433.92MHz so I think your 'new' one will have to be the same frequency as your original one - but I stand to be corrected

N.B. this procedure is in the Terrano service manual, page EL-79

Written by Glen
Produced by Shark1e © 2004-2006