Nissan / Infinity Airbag Light Reset

- 1. Turn the ignition key to the "On Position".
- 2. Watch the airbag light closely. It will stay on for a 6-7 seconds. As soon as it begins to blink, (the start of the flashing), turn the key to the "Off Position" instantly.
- 3. Wait a full 5 seconds
- 4. Repeat steps 1-3 two more times until you have done the cycle three times.
- 5. Now turn the key on and watch the light. It will start blinking in a different, slower manner. This is diagnostic mode. From here, you can read the fault codes. You may remain in diagnostic mode for any length of time until you are ready to proceed to clear the light.
- 6. Now turn the key to the "Off Position" again and wait 5 seconds like in step 3 again.
- 7. Turn the key to the "On Position".
- 8. If the procedure worked, the airbag light will not be flashing. If it does not work the first time, repeat the steps again, or additional faults still remain