

# Workshop 26

## Automatic Transmission oil level checking details for the Nissan Mistral 2.7TD AUTO 1995


### Automatic Transmission Oil Level..

Checking levels of the automatic transmission is strongly advised.


Check the fluid level only when the transmission is hot ( normal operating temperature ) . With the vehicle level, first set the parking brake and then start the engine. While the engine is idling, depress the brake pedal and shift the selector into each range through to the lowest gearing and back again ( this is to help give a true reading ) .

If the vehicle has been driven over 15 km the transmission is hot (it should be around 70-80 degrees.

You may check the level when the vehicle is cold. If the vehicle has not been driven for 5 hours or more and the transmission oil is around 20-30 degrees. However checking the levels when the vehicle is cold will not give a true indicator of the oil levels of your vehicle.

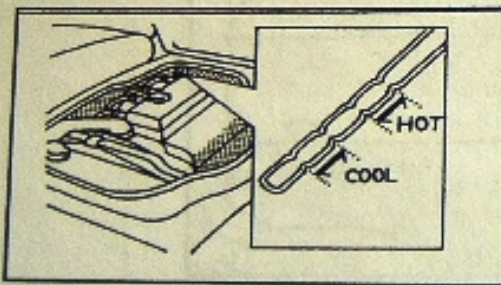

MIN MAX MIN MAX

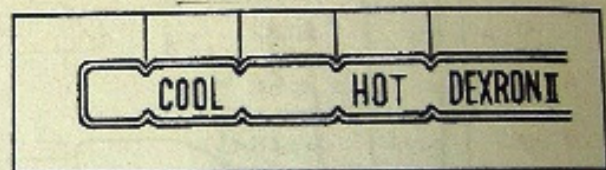

110

*Written by Shark1e  
Produced By Shark1e©*